



Poly Sync 40 Series

Bluetooth Speakerphone

User Guide

Contents

| | |
|---|----|
| First-time setup | 3 |
| Controls | 4 |
| LEDs | 5 |
| Be safe | 5 |
| USB Bluetooth adapter | 5 |
| Setup | 7 |
| Corded setup | 7 |
| Mobile setup | 7 |
| USB adapter setup (adapter models only) | 8 |
| Pair USB adapter again | 8 |
| Charge | 10 |
| Check battery status | 10 |
| Charge | 10 |
| Charge your mobile phone | 10 |
| Load software | 11 |
| Update your Poly device | 11 |
| Daily Use | 12 |
| Power | 12 |
| Answer or end a call | 12 |
| Mute/Unmute | 12 |
| Volume | 12 |
| Manage volume level tones | 12 |
| Voice assistant (smartphone feature) | 12 |
| Launch Microsoft Teams (Teams model only) | 12 |
| Customize your speakerphone | 12 |
| Link speakerphones (daisy chain audio) | 13 |
| Linked speakerphone audio settings | 13 |
| Troubleshoot | 14 |
| What's in the box | 15 |
| Support | 16 |


First-time setup

Important: Your speakerphone is shipped from the factory in a Deepsleep mode to conserve battery. Activate your speakerphone by connecting the USB cable to a power source before first use.

- 1 Connect speakerphone USB cable to a wall charger or computer.

NOTE Some models have a USB-A to USB-C adapter for easy connection to either type of port.


When your speakerphone is activated, the LED bar lights up.

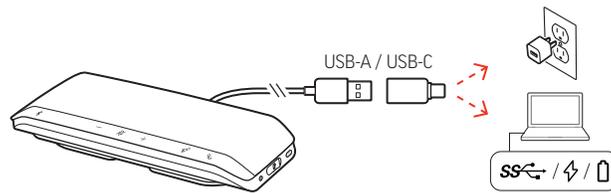

- 2 Connect or pair your speakerphone to take calls or stream media.

Controls

A portable speakerphone with mobile and corded connectivity.

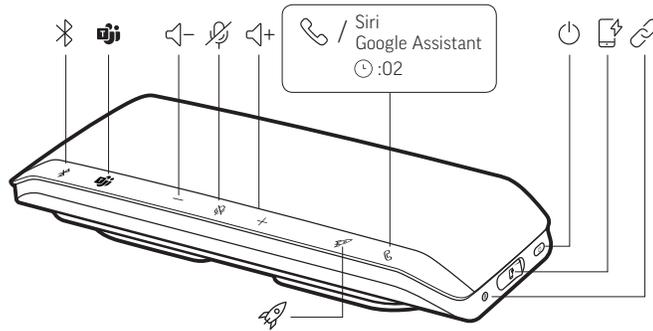

| Icon | Description |
|------------------------|---|
| | Bluetooth pairing |
| | Press to interact with Microsoft Teams (Teams model only, desktop application required) |
| | Volume down |
| | Mute/unmute |
| | Volume up |
| | Call |
| Siri, Google Assistant | Default voice assistant (mobile feature) |
| | Power on/off |
| | USB phone charge port |
| | Link 2 speakerphones (mobile feature) |
| | Play/pause media (default). Customize feature in Poly Lens Desktop App NOTE Play/pause feature may not function with web-based apps |

LEDs


| LED bar | What lights mean |
|------------------------|----------------------------------|
| Crossing blue pattern | Pairing mode |
| Solid blue | Pairing successful (connected) |
| Flashing green | Incoming call |
| Solid green | In a call |
| Solid red | Mute active |
| Crossing white pattern | Linking mode (daisy chain audio) |
| 2 white blinks | Linking successful |

NOTE LEDs do not illuminate in standby mode.

Be safe

Please read the safety guide for important safety and regulatory information before using your new device.

USB Bluetooth adapter

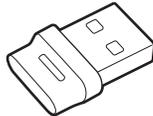

Your high-fidelity Bluetooth USB adapter comes pre-paired to your Poly device. Plug it into your computer to connect to high-fidelity computer audio.

NOTE Adapter's USB connection and design may vary, but function is the same.

Standard LEDs

| USB LEDs | What they mean |
|-----------------------|-------------------------------|
| Flashing red and blue | Pairing |
| Solid blue | Device connected |
| Flashing blue | On a call |
| Solid red | Mute active |
| Flashing purple | Streaming media from computer |

LEDs when Microsoft Teams* is detected


| USB LEDs | What they mean |
|-----------------------|------------------------------|
| Flashing red and blue | Pairing |
| Solid purple | Microsoft Teams connected |
| Flashing blue | On a call |
| Solid red | Mute active |
| Pulsing purple | Microsoft Teams notification |

NOTE **Requires Microsoft Teams desktop application.*

Setup

Corded setup


Connect the USB cable from the speakerphone to the USB port on your computer.

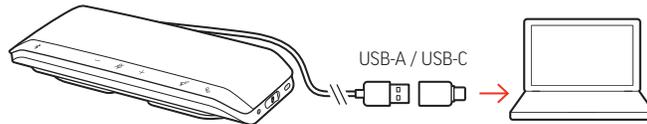

NOTE In corded mode, the speakerphone powers on without using the Power button.

Mobile setup

- 1 With your speakerphone powered on, press the Bluetooth  button for 2 seconds. You hear "pairing" and the LED flashes a crossing blue pattern.

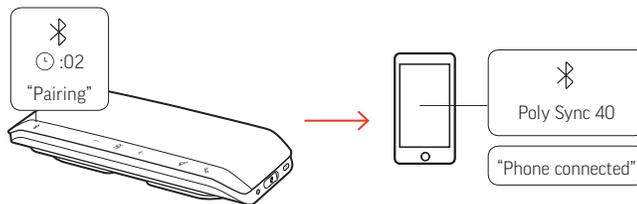

- 2 Activate Bluetooth on your mobile device and set it to search new devices. Select "Poly Sync 40."
- 3 Pairing is successful when you hear "pairing successful" and the LED flashes blue.


Secure Connection (mobile)

The Secure Connection feature provides extra security for Bluetooth calls in a conference room.

When enabled, your paired device disconnects after each mobile call, ensuring that device audio does not play through the speakerphone when not intended. Manage in Poly Lens Desktop App.

NOTE Enabling Secure Connection disconnects previously paired devices.

- 1 With your speakerphone powered on and Secure Connection enabled in Poly Lens Desktop App, press the Bluetooth  button for 2 seconds. You hear "pairing" and the LED flashes a crossing blue pattern.
- 2 Activate Bluetooth on your device and set it to search new devices. Select "Poly Sync 40."

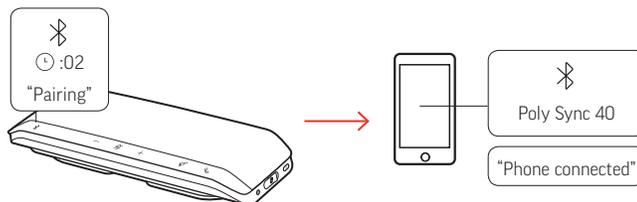

- 3 Pairing is successful when you hear "pairing successful" and the LED flashes blue.




- 4 Make or take a mobile call or play music via Bluetooth.
- 5 After the end of a call, continue the mobile connection by pressing any button within 30 seconds. When no action is taken, the mobile connection ends and the Bluetooth button is no longer illuminated.

USB adapter setup (adapter models only)

Your Bluetooth USB adapter comes pre-paired to your speakerphone.

- 1 Power on your speakerphone and insert the Bluetooth USB adapter into your computer.

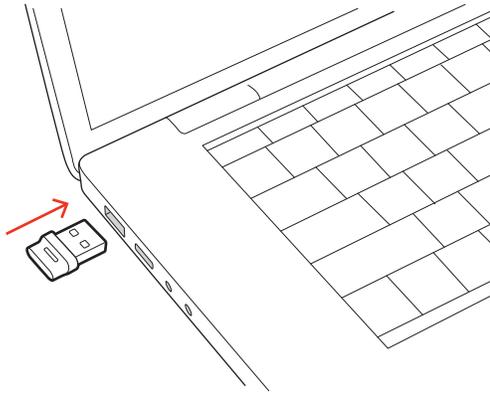

- 2 The USB adapter LED flashes and then turns solid to indicate the speakerphone is connected to the USB adapter. You hear “PC connected” to indicate the connection has been established. When on a call, the LED on the USB adapter flashes blue. When not on a call the LED is solid.
NOTE Adapter design may vary.
- 3 Load Poly Lens Desktop App by visiting poly.com/lens. This allows you to customize your headset behavior through advanced settings and options.


Pair USB adapter again

Typically, your USB adapter is pre-paired to your Poly audio device. In the event that your adapter is disconnected or bought separately, you will need to pair the adapter to your Poly device. The adapter pairing method depends on which USB adapter you use.

Pair BT700 USB adapter again

Typically, your USB Bluetooth adapter is pre-paired to your Poly audio device. In the event that your adapter is disconnected or bought separately, you will need to pair the adapter to your Poly device.

Your USB adapter requires Poly Lens Desktop App to pair to a Poly audio device.
Download: poly.com/lens.

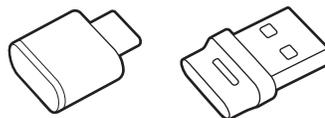


NOTE Adapter design varies by USB connection.

- 1 Insert the high-fidelity Bluetooth USB adapter into your laptop or computer and wait for your computer to recognize it.
- 2 Put your Poly audio device in pair mode.


- 3 Launch Poly Lens Desktop App and navigate to Poly BT700.
- 4 Put your Bluetooth USB adapter into pair mode by selecting "Pair new device" on the adapter's main page or overflow menu. Your adapter flashes red and blue. Pairing is successful when you hear "pairing successful" and "PC connected" and the Bluetooth USB adapter LED is solid.

Pair BT600 USB adapter again

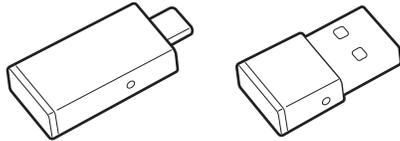

NOTE Adapter design varies by USB connection.

- 1 Insert the high-fidelity Bluetooth USB adapter into your laptop or computer and wait for your computer to recognize it.
- 2 Put your Poly audio device in pair mode.
- 3 Put your Bluetooth USB adapter into pair mode by pressing and holding the recessed pair button with a pen or paperclip until the Bluetooth USB adapter flashes red and blue.

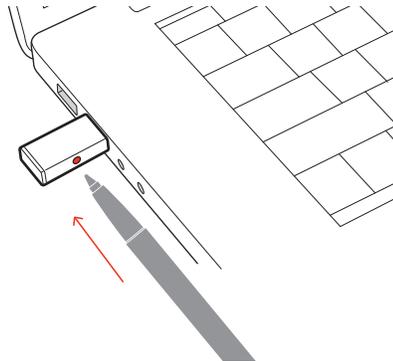

Pairing is successful when you hear "pairing successful" and "PC connected" and the Bluetooth USB adapter LED is solid.

Charge

Check battery status

To check battery status:

- With speakerphone inactive, tap the Power button to hear battery status
- With speakerphone inactive, tap any button to view the LED bar

Battery status LEDs

| LED bar | Battery status |
|------------------------|------------------|
| Solid white long bar | Battery full |
| Solid white medium bar | Battery high |
| Solid white short bar | Battery medium |
| Solid red | Battery low |
| Red flashes | Battery critical |


NOTE LEDs do not illuminate in standby mode.

Charge

Charge the speakerphone via USB using your computer or a wall charger (not provided). The LED bar pulses while charging and turns solid white when fully charged. Allow 5 hours for a full charge.


NOTE For faster charging, connect to a wall charger or to your computer's quick-charge USB port, if available.

NOTE Your speakerphone has a combined USB-A and USB-C cable for easy connection to either type of port.

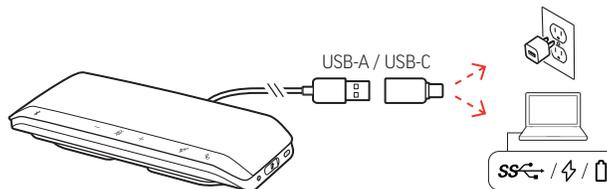

Charge your mobile phone

With the speakerphone powered on, charge your phone by connecting your phone's charge cable to the speakerphone USB-A port (cable not provided).

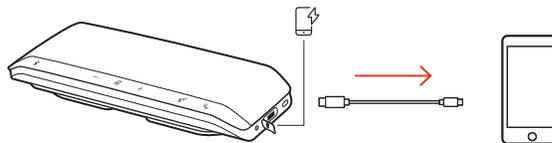

NOTE Speakerphone battery level must be medium or higher.

NOTE Connection provides power only.

Load software

Download Poly Lens App to get the most out of your device. Some softphones require the installation of Poly software to enable device call control (answer/end and mute) functionality.

- Download Poly Lens Desktop App at poly.com/lens.
- Download Poly Lens Mobile App at poly.com/lens, the App Store or Google Play.



| | Poly Lens Mobile App | Poly Lens Desktop App |
|--|-------------------------------|-----------------------|
| Configure call control for softphones | available for some softphones | ✓ |
| Change headset language | ✓ | ✓ |
| Enable features | ✓ | ✓ |
| Battery meter | ✓ | ✓ |
| Update device firmware | ✓ | ✓ |
| Manage notifications and alerts | ✓ | ✓ |
| Schedule health and wellness reminders | ✓ | ✓ |
| View user guide | ✓ | ✓ |
| Find MyHeadset | ✓ | |

Update your Poly device

Keep your firmware and software up-to-date to improve performance and add new features to your Poly device.

Update your device using Poly Lens App. Download at poly.com/lens.

Daily Use

Power Press the Power  button for 2 seconds to power on or off. The LED bar illuminates when powered on.

Answer or end a call Press the Call  button to answer or end a call.

Mute/Unmute During an active call, press the Mute  button to mute or unmute the microphones. Manage mute settings in Poly Lens Desktop App.

Volume Press the Volume up (+) or down (-) buttons to increase or decrease volume.

Adjust speakerphone microphone volume

Place a test softphone call and adjust softphone volume and PC sound volume accordingly.

Manage volume level tones Customize the tones that indicate your current volume level.

To manage your volume level tones, go to Poly Lens App > Settings > Ringtones & Volume > Volume Level Tones and select from “Minimum and Maximum Only” (default) or “Every level.”

NOTE “Minimum and Maximum Only” setting is available only when on a call or playing audio. When your speakerphone is idle, you hear a tone at every volume level.

Voice assistant (smartphone feature) **Siri, Google Assistant, Cortana** Press and hold the Call button for 2 seconds to activate your phone's default voice assistant. Wait for the phone prompt to activate voice dialing, search, and other smartphone voice controls.

Launch Microsoft Teams (Teams model only) Your device has a Teams  button to quickly view and use the Microsoft Teams desktop app. The Teams button pulses when you have a meeting or notification.

- When not on a call, tap the Teams  button to view Microsoft Teams app on your computer.
- When the Teams button LED pulses purple, tap to view your Teams notifications or meeting.

NOTE Teams model and open Teams desktop application required. Teams mobile application is not supported.

NOTE If your Teams button is not responsive, ensure your Poly device is the default audio device in Microsoft Teams settings.

Customize your speakerphone Customize your Rocket  button feature in Poly Lens Desktop App. Play/pause media is the default feature when you tap the Rocket  button.

Choose from:

- Play/pause audio (default)
- Device status check
- Clear trusted device list
- **Mobile calls only:** Default voice assistant (Siri, Google Assistant)
- Redial
- Hold/resume call (varies by softphone)

Link speakerphones (daisy chain audio)


Use two Poly Sync speakerphones with your computer or mobile device.

NOTE You may link Sync 40 and Sync 60 speakerphones. Ensure that each speakerphone is updated to the latest device software release in Poly Lens Desktop App.

NOTE The primary device settings are used when speakerphones are daisy-chained. The speakerphone paired or connected to your computer or mobile phone is your primary device.

- 1 Pair or connect one speakerphone to your PC or mobile device. See Corded setup, Mobile setup or USB adapter setup.
- 2 Wirelessly link speakerphones by pressing both Link  buttons for 2 seconds. You hear "connecting" and the LEDs pulse white. Linking is successful when you hear "connection successful" and the LED flashes white on both speakerphones.

NOTE Enter linking mode only when both speakerphones are inactive (not in a call or streaming media).

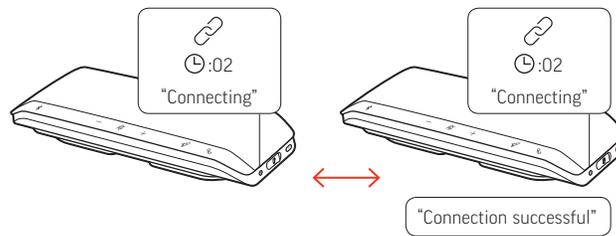

- 3 Control the system from either speakerphone to play audio or make calls.
- 4 End linking mode by pressing both Link  buttons for 2 seconds. You hear "device disconnected."
NOTE The primary device settings are used when speakerphones are daisy-chained. The speakerphone paired or connected to your computer or mobile phone is your primary device.

Linked speakerphone audio settings

Manage daisy chain audio settings in Poly Lens Desktop App. Select an audio output: Party (default) or Stereo.


NOTE In Stereo mode, the primary device has the right channel audio and the secondary device has the left channel audio.

Troubleshoot


| Issue | Resolution |
|---|--|
| When I attempt to use my speakerphone for the first time, it does not power on. | Your speakerphone is shipped from the factory in a Deepsleep mode to conserve battery. Activate your speakerphone by connecting the USB cable to a power source before first use. |
| My speakerphone doesn't charge as quickly as expected. | For faster charging, connect the USB cable to a wall charger or to your computer's quick-charge USB port, if available. |
| (Teams model only) How do I interact with Microsoft Teams? | <ul style="list-style-type: none">• Tap the Teams  button to quickly open and use Microsoft Teams.• Teams model is compatible with Microsoft Teams desktop app. Teams mobile app is not supported. |
| Is stereo sound available when two speakerphones are wirelessly linked? | Yes, in Poly Lens App, go to Settings > General > Daisy chain audio and select Stereo. For more information, see Linked speakerphone audio settings . Download app: poly.com/lens . |
| How do I use the Secure Connection feature with my mobile phone? | The Secure Connection feature provides extra security for Bluetooth calls in a conference room. <ul style="list-style-type: none">• Activate feature in Poly Lens Desktop App.• Automatically disconnects speakerphone from paired mobile device after a call.• Continue the mobile connection by pressing any button within 30 seconds after the end of a call. |
| How do I customize the Rocket  button feature? | <ul style="list-style-type: none">• Customize your Rocket  button feature in Poly Lens App. Download app: poly.com/lens.• See Customize your speakerphone. |
| Can I manage the volume level tones on my speakerphone? | <ul style="list-style-type: none">• Customize your volume level tones in Poly Lens App. See Manage volume level tones on page 12. |

What's in the box

Contents may vary by product.

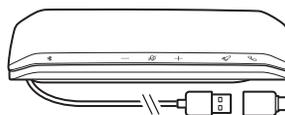

Speakerphone with combined USB-A and USB-C cable

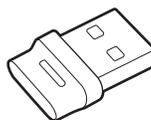

Bluetooth USB Adapter (Poly Sync 40+ only; Design may vary)



Quick start guide

Support

NEED MORE HELP?

poly.com/support

HP Inc.

1501 Page Mill Road
Palo Alto 94304
USA

HP Deutschland GmbH

HP HQ-TRE
71025 Boeblingen
Germany

HP Inc. UK Ltd.

Regulatory Enquiries
Earley West
300 Thames Valley Park Drive
Reading, RG6 1PT
United Kingdom

© 2023 Poly. Bluetooth is a registered trademark of Bluetooth SIG, Inc. All trademarks are the property of their respective owners. Manufactured by Plantronics, Inc.

Model ID: SY40/SY40-M (may be followed by /BT600 or /BT700). System: Poly Sync 40 has a SY40/SY40-M speakerphone. Poly Sync 40+ has a SY40/SY40-M speakerphone and a BT600 or BT700 adapter.

218940-06 06.23